

ERRATA Note

IAR Embedded Workbench 5.2 with the phyCORE-LPC3250 PCB Number 1304.1

Dear Customer,


This errata note affects all shipments of the phyCORE-LPC3250 PCB 1304.1 used in conjunction with the IAR Embedded Workbench version 5.2 and earlier.

Problem Description


All versions of IAR Embedded Workbench 5.2 and earlier that provide support for the phyCORE-LPC3250 come with default demos that are configured for 16MB and 32MB NAND Flash on the phyCORE-LPC3250. All phyCORE-LPC3250 SOMs with PCB number 1304.0 come populated with 32MB of NAND Flash. All phyCORE-LPC3250 SOMs with PCB number 1304.1 come populated with 64MB of NAND Flash. Only 1304.0 PCBs will function properly when using the flashing functionality with the default IAR demo(s). The demo(s) must be modified to include support for the 64MB NAND Flash populated on the 1304.1 PCB.

Problem Solution


1. Start by opening the default *Gettingstarted* demo included in the IAR Embedded Workbench install. Change the project configuration to *Debug xRAM boot from NAND* as shown in the figure below.

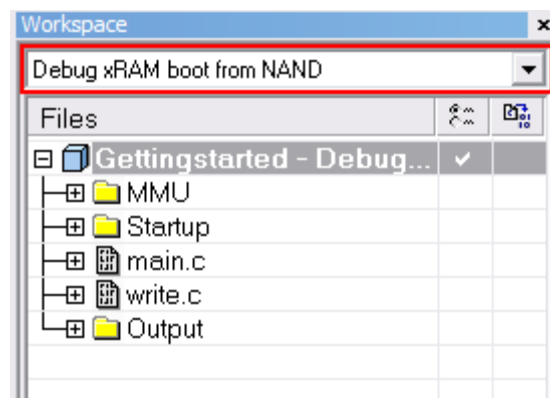


2. On the menu bar go to Project → Options.
3. Click **Debugger** in the *Category* window.
4. Click the **Download** tab.
5. Click the **Edit...** button as shown in the figure below.

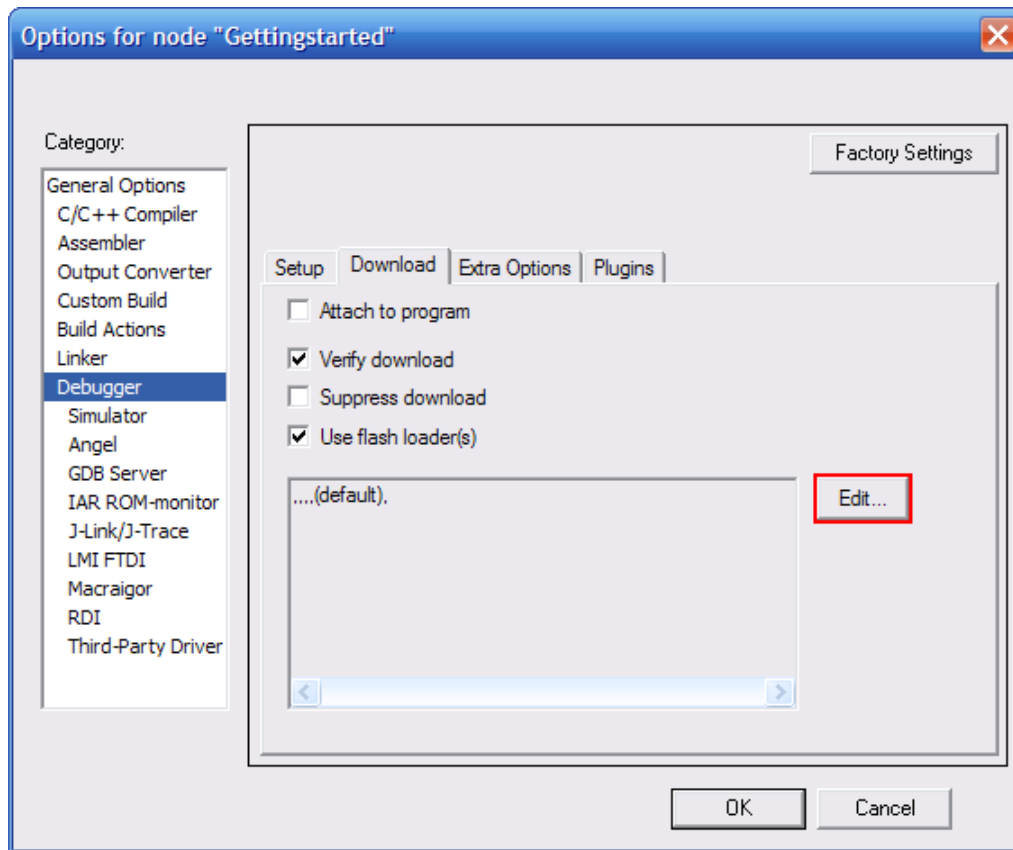

6. When the *Flash Loader Overview* window pops up, click the first entry in the list as shown in the figure below, and then click **Edit...**

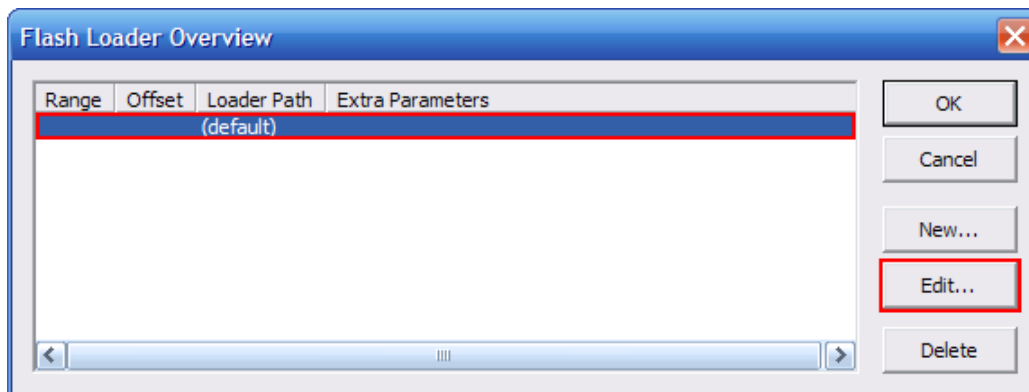

7. In the Extra Parameters field, type `--nand_type_reg 2` as shown in the figure below.

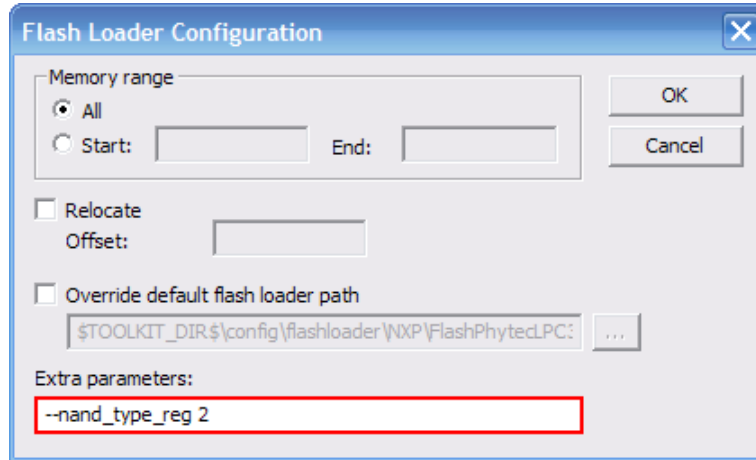

8. Click **OK** to exit the *Flash Loader Configuration* window.
9. Click **OK** to exit the *Flash Loader Overview* window.
10. Click **OK** to exit the *Options for node "Gettingstarted"* window.
11. Your project is now configured correctly to work with the 64MB NAND Flash populating the phyCORE-LPC3250 PCB number 1304.1.

For additional information please contact us.

Regards,

Your PHYTEC America Support Team.

Revision History

Date	Version Number	Changes in this Errata
12/10/2008	TN-200e_1	Initial release.

Support

NORTH AMERICA

PHYTEC America LLC
Phone: 1 (800) 278-9913
E-mail: support@phytec.com
Web: <http://www.phytec.com/>

EUROPE

PHYTEC Messtechnik GmbH
Phone: +49 (6131) 9221-31
E-mail: support@phytec.de
Web: <http://www.phytec.de/>